
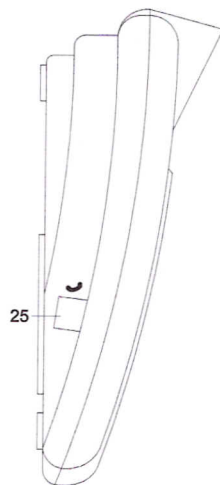
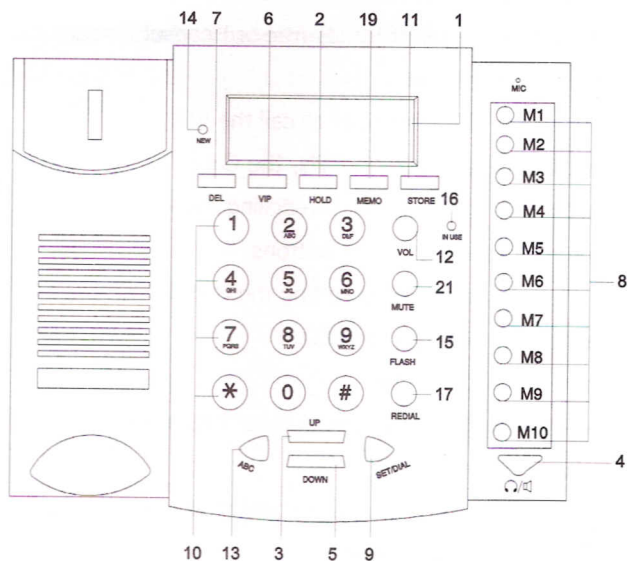


Emotion T6550 Caller ID Phone

User Guide

I Location of function keys

- | | |
|-------------------------------|------------------------------|
| 1. LCD display | 2. Hold button |
| 3. Up button | 4. Hands-Free/Headset button |
| 5. Down button | 6. VIP button |
| 7. Delete button | 8. M1, M2...M10 button |
| 9. SET/ Dial button | 10. Dial button |
| 11. STORE Button | 12. SPK VOL button |
| 13. ABC Button | 14. New Call LED |
| 15. Flash button | 16. In-Use LED |
| 17. Redial/ Pause /Out button | 18. Ringer Hi/Low switch. |
| 19. Memo button | 20. Line Jack |
| 21. Mute button | 22. DC jack |
| 23. Hands-free/Headset switch | 24. Headset socket |
| 25. Handset socket | |

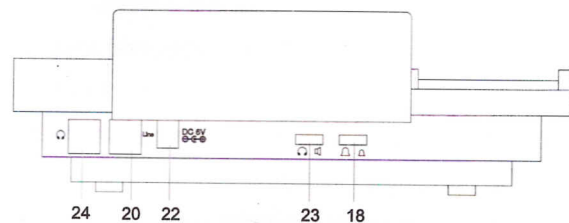

II Key functions

1. **Liquid Crystal Display (LCD)** - Displays the number dialled and caller's number.
2. **HOLD button** – Press to place the call on hold, the caller cannot now hear you.
3. **UP Button** – Press to scroll up.
4. **Hands-free/Headset switch** –To select Hands-free or Headset function.
5. **DOWN Button** – Press to scroll down.
6. **VIP button** – Press to set the VIP number, or to call the VIP.
7. **DELETE Button** – Press to delete Caller details, the Caller ID number or delete a digit or character when in storing or pre-dialing mode.
8. **M1, M2...M10 buttons** – Direct dial memory buttons.
9. **SET/DIAL Button** – Press to enter MENU setting mode or to confirm the setting, or dial out the number displayed on LCD.
10. **DIAL button** – Press to connect your call.
11. **STORE Button** – Press to save the telephone number into memory key or phone book.
12. **Speaker VOL adjust button** – Press to adjust speaker volume.
13. **ABC Button** – Press to view the phonebook.
14. **New Call LED** – Indicates the presence of a new call.
15. **FLASH Button** – Press for call-waiting or other functions offered by your local telephone company.
16. **In-Use LED** – Indicates that the phone is in use.
17. **REDIAL Button** – Press to redial the last number called, or press to add a 3.6 second pause during the dialed number, or press to review out-going call status during on-hook state.

18. **RINGER HI/LOW Switch** – To adjust the ringer volume to Hi/Low.
19. **MEMO button** – Press to initiate automatic dialing of stored numbers.
20. **Line jack** – Connect to phone line.
21. **MUTE button** – Press to mute the microphone during your conversation.
22. **DC Jack** – DC power jack.
23. **Hands-free/Headset** switch –To select Hands-free or Headset function.
24. **Headset socket** – Connect to Headset.
25. **Handset socket** – Connect to Handset.

III Setting up

1.) Installation

Warning - Disconnect the mains power connector from the wall socket before inserting or changing the batteries

Open the battery cover located under the unit and insert four AAA batteries. Please note the correct positioning (+ and -). Connect the telephone Line to the Line Socket. The LCD display is turned on and the display shows the following:-

				SAT
	0:01	01/	1	
-000-		-000-		
ALL		NEW		

BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Use only AAA batteries.
2. Be sure to check battery polarity. Reversed batteries may cause damage to the device.
3. If the device is not to be used for a long period of time, remove batteries to prevent damage or injury from possible battery leakage.
4. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)

2) Set-up Mode

In the on-hook or off-hook state, press **SET** until the **LCD** display shows: **VIEW MENU**↑↓. Use the **UP/DOWN** buttons to scroll through the set-up menu. When you wish to configure a menu item press **SET**, you then enter the configuration menu for that item. To set a menu parameter press **SET** when the item is displayed. To navigate through the configuration options use the **UP/DOWN** and **SET** buttons. To leave set-up mode at any time, press **DEL**.

Setting the various options is described below in more detail:

LANGUAGE

When the **LCD** shows: **SELECT LANGUAGE**, press **SET**, the display will change to **NEDERLANDS** as the default language setting. Use the **UP/DOWN** buttons to select the language you require from Dutch / English / French / Italian / German / Slovenian / Croatian / Russian, when your language is displayed press **SET**.

DATE/TIME

When the **LCD** shows: **DATE/TIME**, press **SET**, the year digits will flash. Use the **UP/DOWN** buttons to change the year then press **SET**. Repeat the process to set the month, date, hour and minutes.

LCD CONTRAST

When the **LCD** shows: **CONTRAST ADJUST**, press **SET** and use the **UP/DOWN** buttons to choose from five contrast settings. The default setting is 3.

MAKING A PHONE BOOK ENTRY

When the **LCD** shows **PHONE BOOK ADD**, press **SET**, the **LCD** display changes to **INPUT NUMBER**, using the keypad input the telephone number you wish to store and press **SET**. The **LCD** now shows **ENTER NAME**, using the keypad again, enter the name you wish to store. Use the **UP/DOWN** buttons to move the cursor and **DEL** to make corrections. When you have finished, press **SET** again to confirm. To exit this feature, press **DEL**.

Letters and symbols used on the alpha-numeric keypad:

[1] 1	[7] P Q R S 7
[2] A B C 2	[8] T U V 8
[3] D E F 3	[9] W X Y Z 9
[4] G H I 4	[0] 0 . - Space
[5] J K L 5	[*] *
[6] M N O 6	[#] #

TO EDIT A PHONE BOOK ENTRY

When the **LCD** shows **PHONE BOOK EDIT**, press **SET** and input the first character of the name you wish to edit. Using the **UP/DOWN** buttons you can scroll through names corresponding to the first letter. Pressing **SET** again with a name selected will display the telephone number corresponding to the name. You can easily view all the names in sequence by not entering an initial letter, but by using the **UP/DOWN** buttons to scroll through the phone book. When you have found the entry you wish to edit use the **DEL** button to make changes. Then press **SET** to confirm your entry.

To exit, press **DEL**.

BABY CALL (Child Monitoring Feature)

When the **LCD** shows **BABY CALL**, press **SET** and the message **BABY CALL OFF** will be displayed. Use the **UP/DOWN** buttons to turn the feature **ON** and press **SET** again. Enter the **BABY CALL** telephone number you wish to monitor (up to 22 digits) and press **SET** to confirm.

FLASH TIME

When the **LCD** shows **FLASH TIME** press **SET** and the message 100 will be displayed. Use the **UP/DOWN** buttons to select the desired flash time (100mS, 300mS, 600mS,). Press **SET** to confirm. Press **DEL** to exit.

IV OPERATION

a.) Receiving incoming calls: When receiving a phone call, the **LCD** will display the phone number together with the name of the caller plus the date, time, and a serial number. An unknown number will display a "**NEW**" icon, and a repeated number will carry a "**REP**" icon. A private call (when the caller prefers his/her number to be hidden) will display "**PRIVATE CALL**". A call out of service will display "**UNAVAILABLE**". An incorrect incoming signal will display "**LINE ERROR**". If it's a FSK format caller ID signal, the current month, date and time display will be updated (while the year remains unchanged).

If no call information is available from the telephone exchange, the name shown on the **LCD** will be the same as that in the phone book.

b.) Checking incoming calls: You can check incoming call history by using the **UP/DOWN** buttons to view call information including phone number, date, and time. To scroll rapidly, press and hold the **UP/DOWN** buttons.

c.) **VIP** Number function: Pressing the **VIP** key whilst reviewing the incoming call list will set the selected call as the **VIP** number, whilst the old **VIP** number will become a normal call number. A **VIP** number cannot be erased, it must be returned to a normal number first.

d.) To return a call or missed call: Simply press the **SET / DIAL** key when the number to be called is displayed.

e.) Making a call using the phone book: In the on-hook state, press the **ABC** phone book key and enter the first character of the name to find the person you wish to call. Alternatively you can simply scroll through the phone book using the **UP/DOWN** buttons. To dial out, press **SET / DIAL** or **HF** (hands-free) keys.

f.) Making a call: Enter a phone number and press the **SET / DIAL** or **HF** (hands-free) keys. Use the **DEL** button to correct any mistakes.

g.) Using the **DEL** key:

- In setting mode, use it to correct any input mistakes and to quit a setting.
- In dialing mode, use it to correct any input mistakes.
- When scrolling incoming calls, use it to delete a phone number. Press and hold it for 4 seconds to delete the incoming call list.
- When scrolling outgoing calls, use it to delete a phone number.
- When scrolling the phone book, use it to delete a record.

h.) **BABY CALL**: Press any key except **SET** key to dial the setting number when **BABYCALL** is on.

i.) Memory store and dial out.

1.) One touch memory store:

-- on-hook + number to call + **STORE + Mi (M1 to M10)**

-- on-hook + incoming call no. + **STORE + Mi (M1 to M10)**

2.) One touch memory dial out.

-- Off hook + **Mi (M1 to Mb10)** or

-- on-hook + **Mi (M1 to M10)** + off hook.

3.) Two-touch memory store:

-- on-hook +number to call+ **STORE + I (I=1 - 9, *, #)**

-- on-hook + incoming call no. + **STORE + I (I=1 - 9, *, #)**

4.) Two-touch memory dial out:

--off hook + **Mem + I (I=1 - 9, *, #)** or

--on-hook + **Mem + I (I=1 - 9, *, #)** + off hook

j.) Caller ID number store in phone book:

Incoming call no. + **STORE + PHONEBOOK + STORE + STORE.**

k.) Review out going call list:

Numbers called will be stored in the redial buffer. The Redial buffer can store up to 16 sets of outgoing numbers. Press the **REDIAL/PAUSE** button on-hook and the **LCD** will display the last dialed number. Press **REDIAL/PAUSE** button again and the previous dialed number will be displayed. Repeatedly pressing the **REDIAL/PAUSE** button will scroll through previous numbers dialed.

l.) To call a previously dialed number:

1.)Press the **REDIAL/PAUSE** button during on-hook state until the number you require is displayed on the **LCD**.

2.) Press the **SET / DIAL** or **HANDS-FREE** button to dial the number.

m.) Hands-Free and Headset functions.

1.) Set the Hands-Free/Headset switch to or to select either the Hands-Free or Headset function.

2.) Press the Headset/Handsfree key to turn on the Hands-Free/Headset function.

V. Caller ID service

Caller ID allows the caller's phone number to be shown on the display before you answer the call. To use this feature you may first have to subscribe to the Caller ID service provided by your telephone company. Your telephone company may call this service by a different name.

HOLD button

During a phone call pressing the **HOLD** button puts the call on hold. When pressed again the call will be released out of the hold function.

MUTE button

This function is similar to the hold function, but the **MUTE** button must be pressed continuously in order to keep the call muted. Releasing the **MUTE** button means that the caller can hear you again.